



ASTRA

THE OPTICS STANDARD

OTX1600 Laser Rangefinder Quick Start Guide



Specifications & Features

Magnification	6X
Objective Lens Diameter	21 mm
Close Focus	6 yards
Eye Relief	16 mm
Exit Pupil	3.5 mm
Field of View	31.50 ft. at 100 yds.
Water-Resistance Rating	IPX4 (Water-Resistant)
Lens Coating	Fully Multi Coated with Rain Repellent
Housing Material	Composite with Rubber Armoring
Dimensions	4"x 1.44"x 3.11"
Total Wt. (including battery)	4.25 oz.
Laser Type	905 nm Class 1 Eye-Safe
Display Type	Red Reflective OLED
Range Response Time	0.1 seconds
Battery Type	CR-2 3-volt Lithium
Battery Life	Approximately 10,000 Readings
Laser Range (Reflective)	6-1,760 yds.
Laser Range (Tree)	6-1,000 yds.
Laser Range (Deer)	6-800 yds.
Horizontal (Angle Corrected) Mode	Yes
Angle with Line of Sight Mode	Yes
Archery Mode	Yes
Gun Mode	Yes
Golf Mode	Yes
SCAN Mode	Yes

Download the full instruction manual at www.astraoptix.com.
For customer service support, email Contact@astraoptix.com



ASTRA

THE OPTICS STANDARD

What's in the Box?

- ◆ 6 Power x 21mm Laser Rangefinder Monocular
- ◆ Soft Premium Carry Case
- ◆ Microfiber Lens Cleaning Cloth
- ◆ Adjustable Neck-style Lanyard
- ◆ Astra Optix™ Decal Sticker
- ◆ CR-2 3-volt Lithium Battery (Battery Pre-Installed)
- ◆ Quick Start Guide




Download the full instruction manual at www.astraoptix.com.
For customer service support, email Contact@astraoptix.com

Your Rangefinder at a Glance



Red Reflective OLED

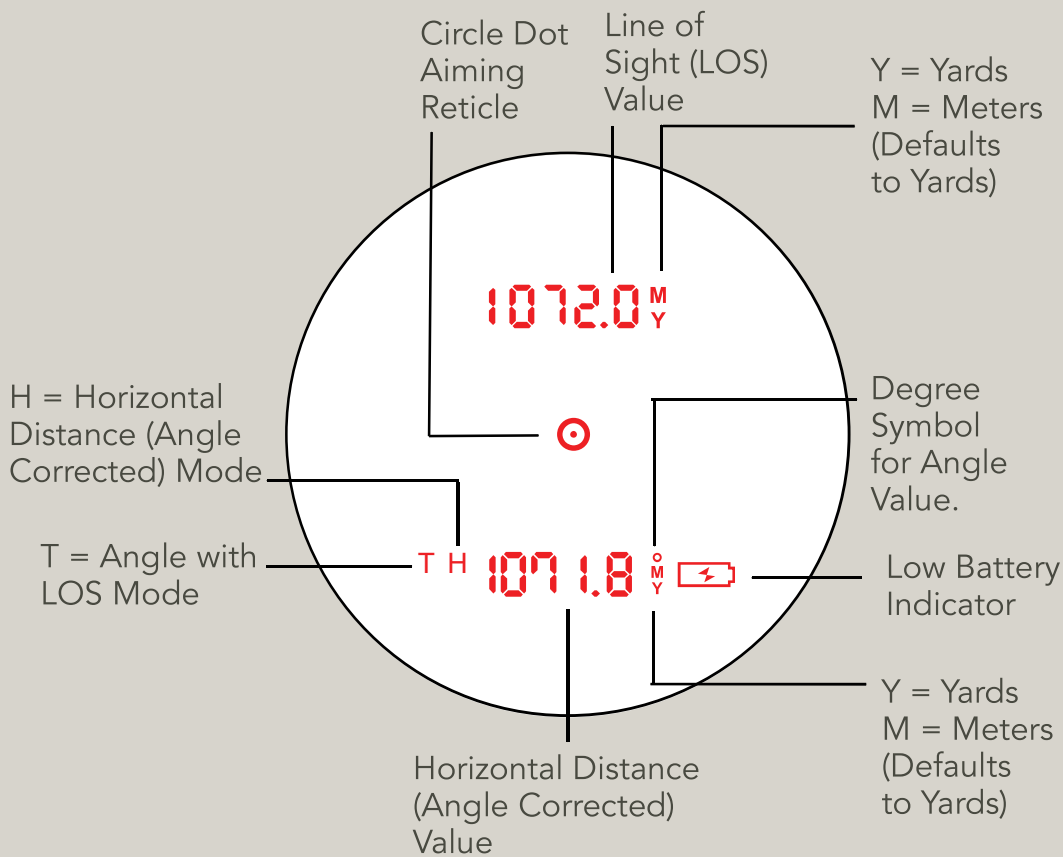



ASTRA

THE OPTICS STANDARD

Quick Start

1. Connect the Battery: Open the **Battery Cover** and remove the plastic insert from the top of the battery.



2. Turn on unit and Adjust Eyepiece Diopter Focus: Press the **Power (Range) Button** to turn on the rangefinder **Red Reflective OLED** display.

Turn the **Eyepiece Diopter Focus** until both the image in the field of view and **Aiming Reticle** are clear and focused.

Press the
Power Button



Rotate Eyepiece



3. Adjusting the Red OLED Display Brightness: Hold the **Mode Button** to enter the menu setting, Press the **Power Button** to cycle between 5 different brightness levels. Press the **Mode Button** to select.

Brightness Setting



- ◆ 1 = Lowest brightness setting
- ◆ 5 = Highest brightness setting

NOTE: For some Astra Optix models, the display brightness setting is the last item in the menu. If the brightness setting is not the first item in the menu, then press the **Mode Button** to advance through all the menu items until you see the brightness setting.



ASTRA

THE OPTICS STANDARD

Quick Start

4. Measuring Distance: Aim the **Aiming Reticle** on the object you want to range and press the **Power Button** to display the distance. Your unit factory default setting is the **Horizontal (Angle Corrected) Mode**.

The Line of Sight (LOS) value is displayed at the top of the display for 2 seconds.



The angle-corrected Horizontal Distance (**H**) value is displayed at the bottom of the display for up to 8 seconds or until you take a new measurement.



5. Menu Settings - Button Operation Summary

Press Power Button to turn on and to measure the distance.

Press Power Button to cycle between menu items when in the menu.

Hold Power Button to SCAN.



Press Mode Button to confirm selections in the menu.

Hold Mode Button to enter menu.

Hold Mode Button to exit menu.



Quick Start

5.1. Menu Settings - Menu Operation Summary

- ◆ Distance Units Selection
 - Y / M
- ◆ Standard Mode (Std)
 - Horizontal (Angle Corrected) with Line of Sight
 - Angle with Line of Sight
 - OFF (Only Line of Sight)
- ◆ Archery Mode (ArCH)
- ◆ Golf Mode
- ◆ Gun Mode
- ◆ Brightness Setting
 - 1 thru 5


5.2. Yards & Meters Selection: In the menu press the **Power (Range) Button** to cycle between Yards (Y) and Meters (M). Press the **Mode Button** to select.



5.3. Select the Operation Mode: Press the **Power Button** to cycle between **Standard Mode (Std)**, **Archery Mode (ArCH)**, **Golf Mode** or **Gun Mode**. When the selection you want to use is blinking, press the **Mode Button** to select your preferred mode.



5.4. Sub-Modes under Standard Mode: Press the **Power Button** to cycle between each sub-mode. Press the **Mode Button** to select.

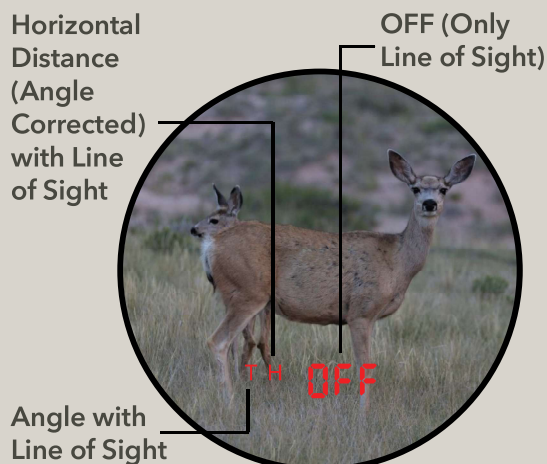



ASTRA

THE OPTICS STANDARD

Tips for Using Your Rangefinder

- ◆ Your laser rangefinder comes defaulted to the **Horizontal (Angle Corrected) with Line of Sight** distance mode. For archery or shooting, this mode will give you the angle-corrected shoot-at distance to use. For Archery only, use the Archery Mode (ArCH).
- ◆ If you turn off your rangefinder, it will keep the last settings used.
- ◆ This rangefinder also has **Angle with Line of Sight** mode. In this mode, it will display the **Line of Sight (LOS)** value for 2 seconds at the top of the display followed by the **Angle** value at the bottom of the screen. Shooters can use this information to calculate holdover using a ballistics calculator.
- ◆ The **Gun Mode** is optimized so that the value displayed will be the farthest distance value of a group of targets that are within your field of view. This is good if you are trying to range a target through trees or other obstructions.
- ◆ If using this rangefinder on the golf course, choose the **Golf Mode (GOLF)**. The **Golf Mode** will display the nearest distance value (Golf Flagstick) of a group of targets that are within your field of view.
- ◆ Under ideal conditions, your Astra Optix™ Laser Rangefinder can measure the distance of reflective objects out to 1,760 yds. It can also measure a deer out to 800 yds. The type of target you are ranging strongly impacts the maximum ranging distance.
- ◆ Shiny reflective objects such as metal buildings will range much better than less-reflective objects such as trees, animal fur, bushes or grass.
- ◆ Objects that are more dense, such as trees or rock, will range better than bushes or grass.
- ◆ Bright-colored objects normally range better than dark-colored objects.
- ◆ Rain, fog, snow, bright sunny days and dusty days will reduce the overall ranging performance.
- ◆ Cloudy days without fog, snow, rain or dust blowing in the air provide the best ranging conditions.
- ◆ Targets that have a flat surface 90° to the laser emitting from the laser rangefinder range better than targets that have a curved surface, or are positioned at an angle in relation to the emitted laser.



ASTRA

THE OPTICS STANDARD

Register your Product

Please register your product to activate our **Handshake Warranty** online at www.astraoptix.com so it is covered in case anything happens to your product.



Like us on Facebook to see the latest news for our Astra Optix rangefinders!



Follow us on Instagram to see our product photos and videos.

Scan our warranty QR code to go directly to our Handshake Warranty registration page.

Warning

- ◆ Do not look directly at the sun with your rangefinder, as it could cause serious damage to your eyes.
- ◆ Do not aim the rangefinder at a person's eyes and do not look into the objective-lens side of the product when you are pressing the power button.
- ◆ Keep out of reach of small children.
- ◆ Only use a CR2 3-volt battery and do not use any outside power source.
- ◆ Do not attempt to open or take apart your laser rangefinder, as this will void your lifetime warranty, may damage your product and could cause electric shock.
- ◆ Class 1 Laser Product. Product complies with IEC60825-1: Ed. 3: 2014-05 and 21CFR1040. 10/11.

We are here to help!

Don't hesitate to reach out to us if you have any questions or concerns about your product. On behalf of the Astra Optix family, we want to thank you for your purchase and support.

